


Instalation guide

SQUID®

More info and movies on our website

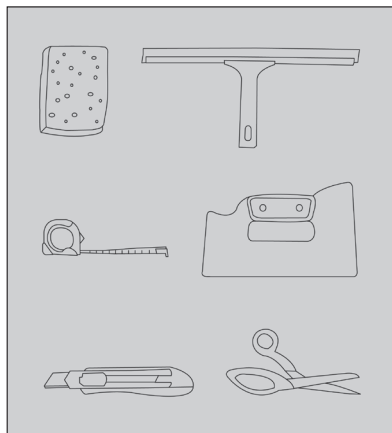

Tools: cleaning tools for your window, tape, measure, plastic squeegee, scissors, utility knife




Clean and degrease your window thoroughly with water and a dash of amoniac. Dry off the window entirely.




Measure the width and the height of the window you want to cover.




Cut off a piece of Squid® larger than your window. Add 10 cm to your measurements to make sure Squid® overlaps your window entirely.

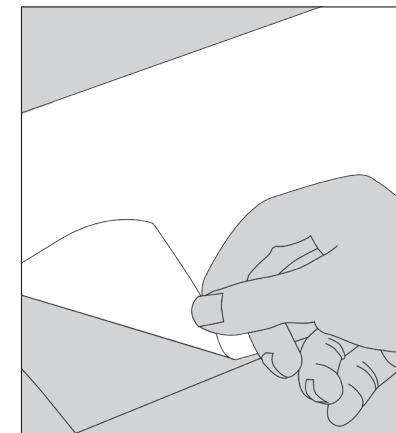


Remove the backing paper from Squid®.

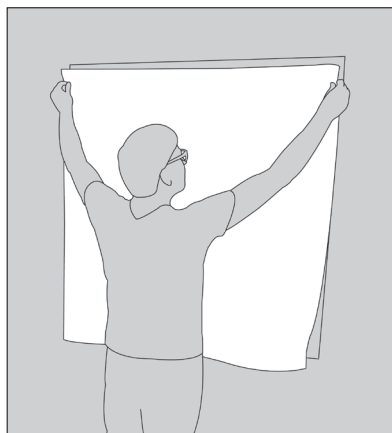

Take your Squid® and align with the top of your window. Press Squid® against the window to stick it in place. Put as little tension on the fabric as possible.

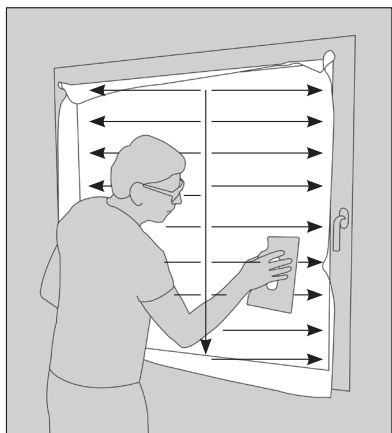

Use the squeegee to adhere the Squid® against the glass. Press the Squid® in the middle and rub all air and creases away from the center outwards (see arrows). Press the entire surface, all edges and corners well with the squeegee.

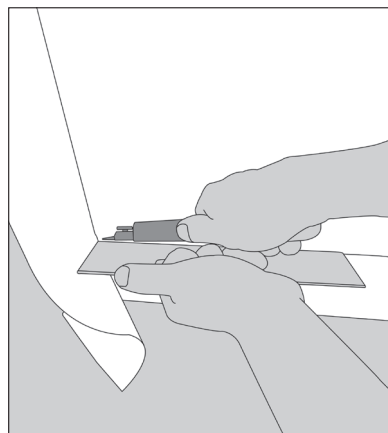

Carefully cut the excess with your utility knife. Place your plastic squeegee between your knife and the window frame to help cut straight.



Use the squeegee to press the Squid® hard to the window in order to activate the glue.



Enjoy!



squid.be